



# 3009URF III

## Vista MCE Remote Controller



- 2.4GHz RF technology with an operating range of up to 10m.
- Press the Media Center Start button to access, command, and control your digital entertainment options.
- View more type of entertainment-TV/Video recording, personal Video, Movie, Music, Photos, and Radio as well as control the Media Center.
- Microsoft Windows Vista certification and Green Start Button support to run virtual remote server on your Media Center computer.
- Include all of the buttons and functions necessary for Microsoft certification.
- Conveniently access the PC digital entertainment.
- 5 Teletext menu hotkeys support ISDB data function for the digital television (DTV) and digital radio format.
- Play and Record media directly what you are watching.
- Navigate 4 way to control the cursor arrows.
- Quickly access the Media Center and play the shortcut keys.
- Edit the Digital Photos and Videos directly.
- Shuffle and manage the digital music collection.
- Use metal dome for better tactile feel.
- Mini USB dongle style receiver.

<b>Specifications</b>	
<b>Remote controller</b>	
Key numbers	44 / 49 / 52
Switch activation mechanism	Metal dome
Transmission frequency	2.4GHz
Operation Distance	up to 10m
Dimension	200 (L) x 50 (W) x 27 (H) mm
Weight	100g (not including 2 AAA batteries)
Peak Force	56 +/- 10 g
<b>Receiver</b>	
Connector	USB 2.0
Dimension	51.4 (L) x 17 (W) x 8 (H) mm
<b>Environment Compliant</b>	
	WEEE, RoHS
<b>Agency Approval</b>	
	FCC , CE , BSMI



## Layout

### ■ Standard : 44 buttons



**1 Power Button**  
 Power (Standby)

**2 Transport Control Buttons**

Play	Fast Forward
Pause	Rewind
Stop	Skip Forward
Record	Skip Backward

**3 Navigation Control Buttons**

Green Start Button (MCE)
Back
More
Cursor Keys
OK

**4 Audio and Video Control Buttons**

Vol.	Volume Up
Vol.	Volume Down
	Mute
Ch.	Chan Up
Ch.	Chan Down

**5 Media Center Shortcut Buttons**

Recorded TV	Music
Guide	Pictures
Live TV	Video
DVD Menu	Radio

**6 Numeric Keypad**


### ■ Standard with Teletext buttons : 49 buttons



**1 Power Button**  
 Power (Standby)

**2 Transport Control Buttons**

Play	Fast Forward
Pause	Rewind
Stop	Skip Forward
Record	Skip Backward

**3 Navigation Control Buttons**

Green Start Button (MCE)
Back
More
Cursor Keys
OK

**4 Audio and Video Control Buttons**

Vol.	Volume Up
Vol.	Volume Down
	Mute
Ch.	Chan Up
Ch.	Chan Down

**5 Media Center Shortcut Buttons**

Recorded TV	Music
Guide	Pictures
Live TV	Video
DVD Menu	Radio

**6 Numeric Keypad**


**7 Teletext Buttons**

	Teletext on/off
	Red
	Green
	Yellow
	Blue



■ **Japanese layout : 52 buttons**



**1 Transport Control Buttons**

- ▶ Play    ⏩ Fast Forward
- ⏸ Pause    ⏮ Rewind
- Stop    ⏭ Skip Forward
- Record    ⏪ Skip Backward

**2 Navigation Control Buttons**

- 🟢 Green Start Button
- ⬅ Back
- ⓘ More
- ⬆ ⬇ ⬆ Cursor Keys
- ⏏ OK

**3 Audio and Video Control Buttons**

- ⏻ Power (Standby)
- Vol. ⬆ Volume Up
- Vol. ⬇ Volume Down
- 🔇 Mute
- Ch. ⬆ Chan/Page Up
- Ch. ⬇ Chan/Page Down

**4 Media Center Shortcut Buttons**

- 📺 Recorded TV    🎵 Music
- 📖 Guide    🖼 Pictures
- 📺 Live TV    📺 Video
- 📺 DVD Menu    📻 Radio

**5 Numeric Keypad**

- 0 - 12
- #
- \*
- CLEAR
- ENTER

**6 Teletext Buttons**

- d Teletext on/off
- 🔴 Red
- 🟢 Green
- 🟡 Yellow
- 🔵 Blue

**System Requirement**

- Windows Media Center PC or other peripheral devices with Windows Media Center
- Available USB port

**Package Contents**

- Remote controller
- Receiver.
- Quick install guide.
- 2 x AAA batteries



**Headquarters**  
**Taiwan Office:**  
 TEL: (886)-2-2696-1888  
 FAX: (886)-2-2696-1899

**U. S Office**  
**California:**  
 TEL: (1)-510-657-3956  
 FAX: (1)-510-657-1859

**European Office**  
**France:**  
 TEL: (33)-1-4670-1978  
 FAX: (33)-1-4670-1897

**Netherlands:**  
 TEL: (31)-10-264-2444  
 FAX: (31)-10-264-2458